

# Model:SAH-RT

LEVER LOCK

## PARTS LIST

### SPRING KNOB



A



B



C



D



E

### SCREW PARTS



\*4

F



\*2

G




\*3


H

C

60mm or 70mm  
2-3/8" or 2-3/4"

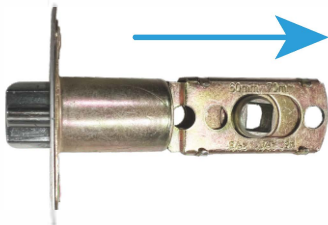

Door Thickness: 35mm to 48mm  
1-3/8" to 1-31/32"

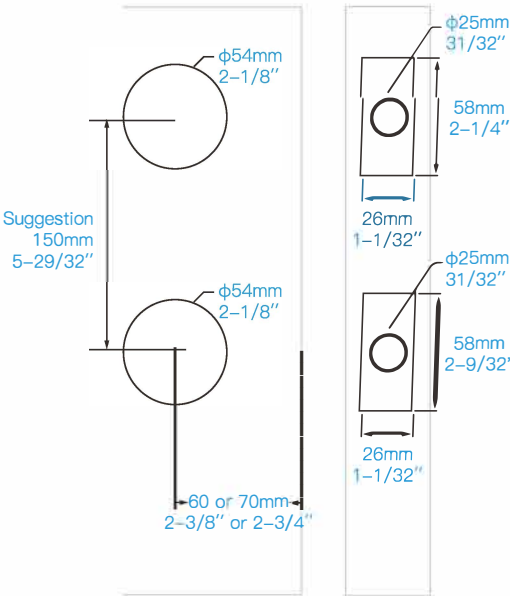



1. Adjust the length of the latch bolt I and secure it with screw F.



2. Install the exterior parts: Put on the knob A and line it up with the hole in the latch bolt.



3. Install the interior parts: Ensure the interior knob B is centered over the positioning nut before tightening.



4. Install the interior parts: Secure the knob B with screw G.



5. Make sure you can turn the knob and key easily without any sticking.



6. Turn the screw on the face plate to make the lock feel smoother when you turn it.